

100

 
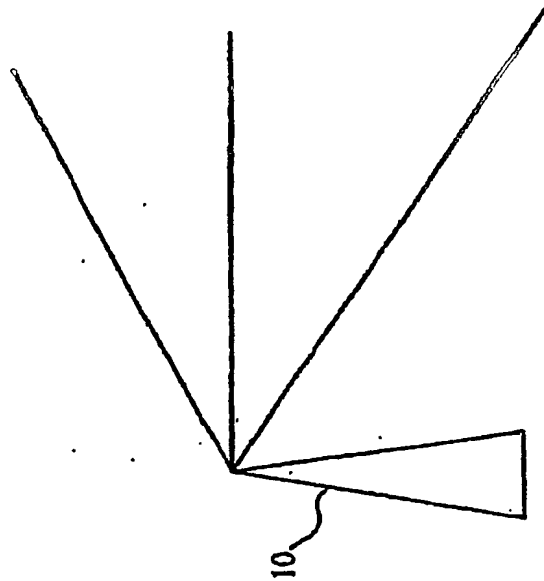 


FIG. 1

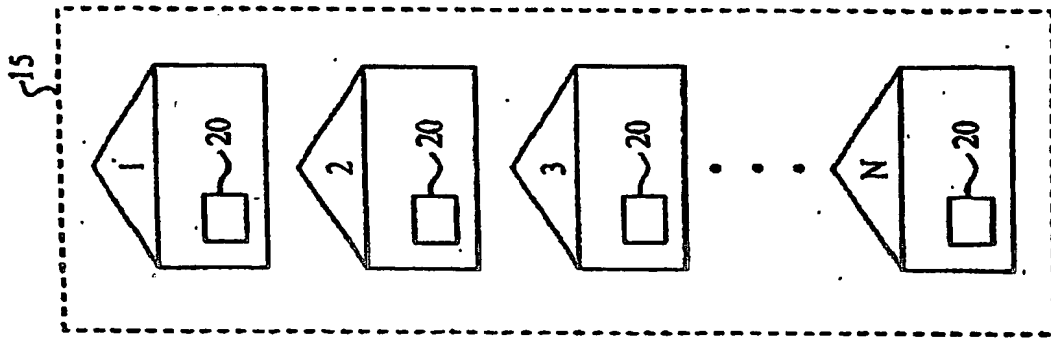

2 / 12

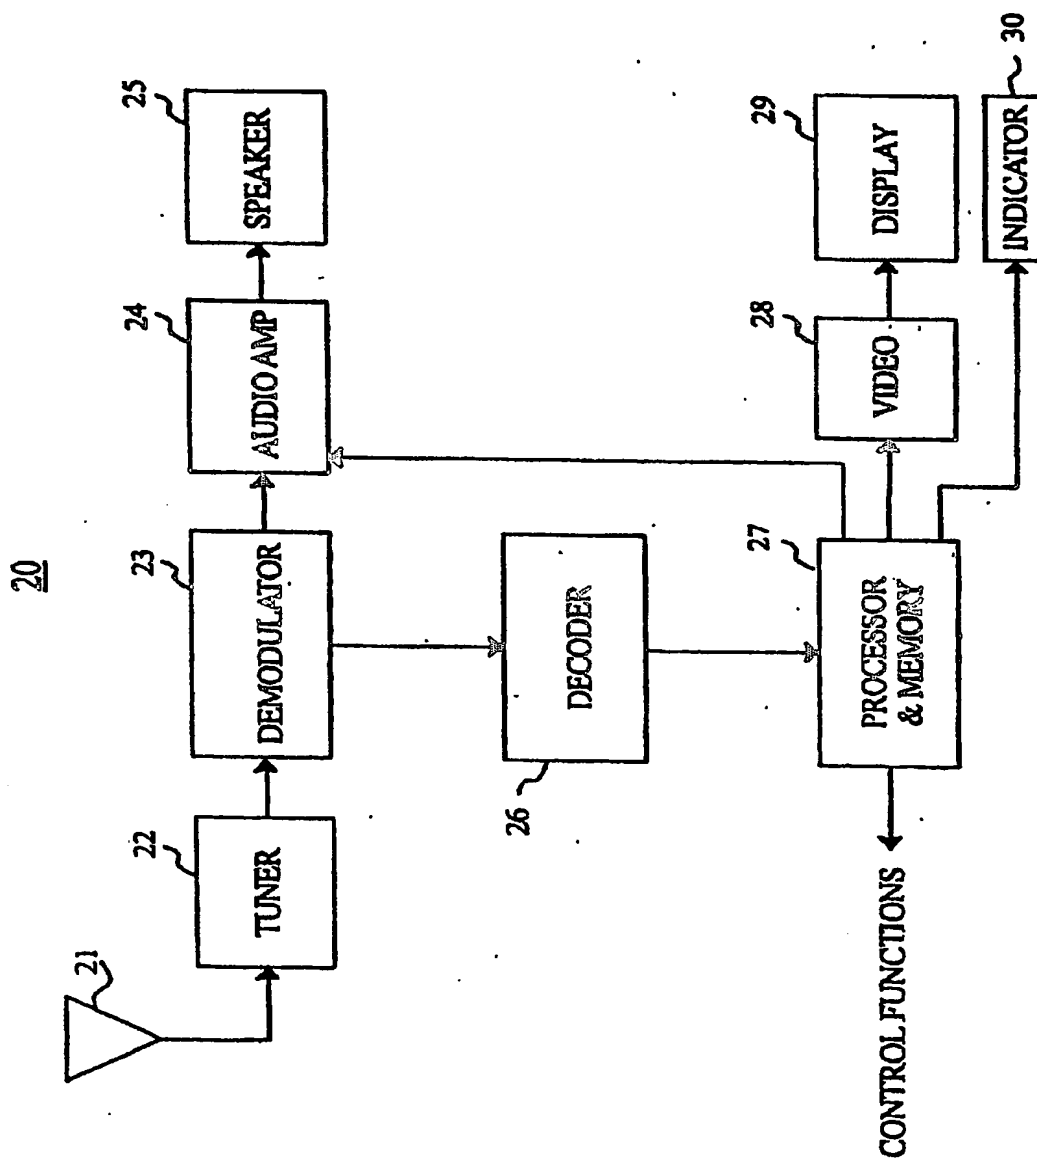 


FIG. 2

3 / 12

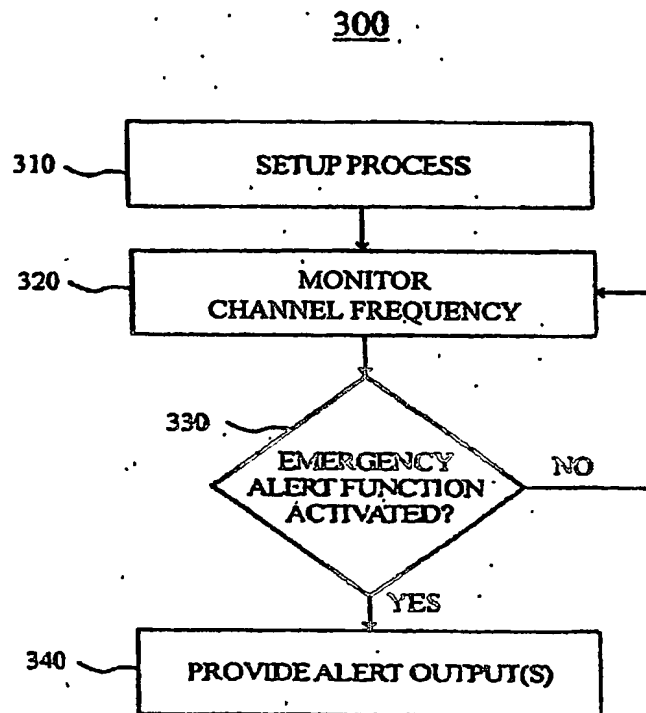 


FIG. 3

20

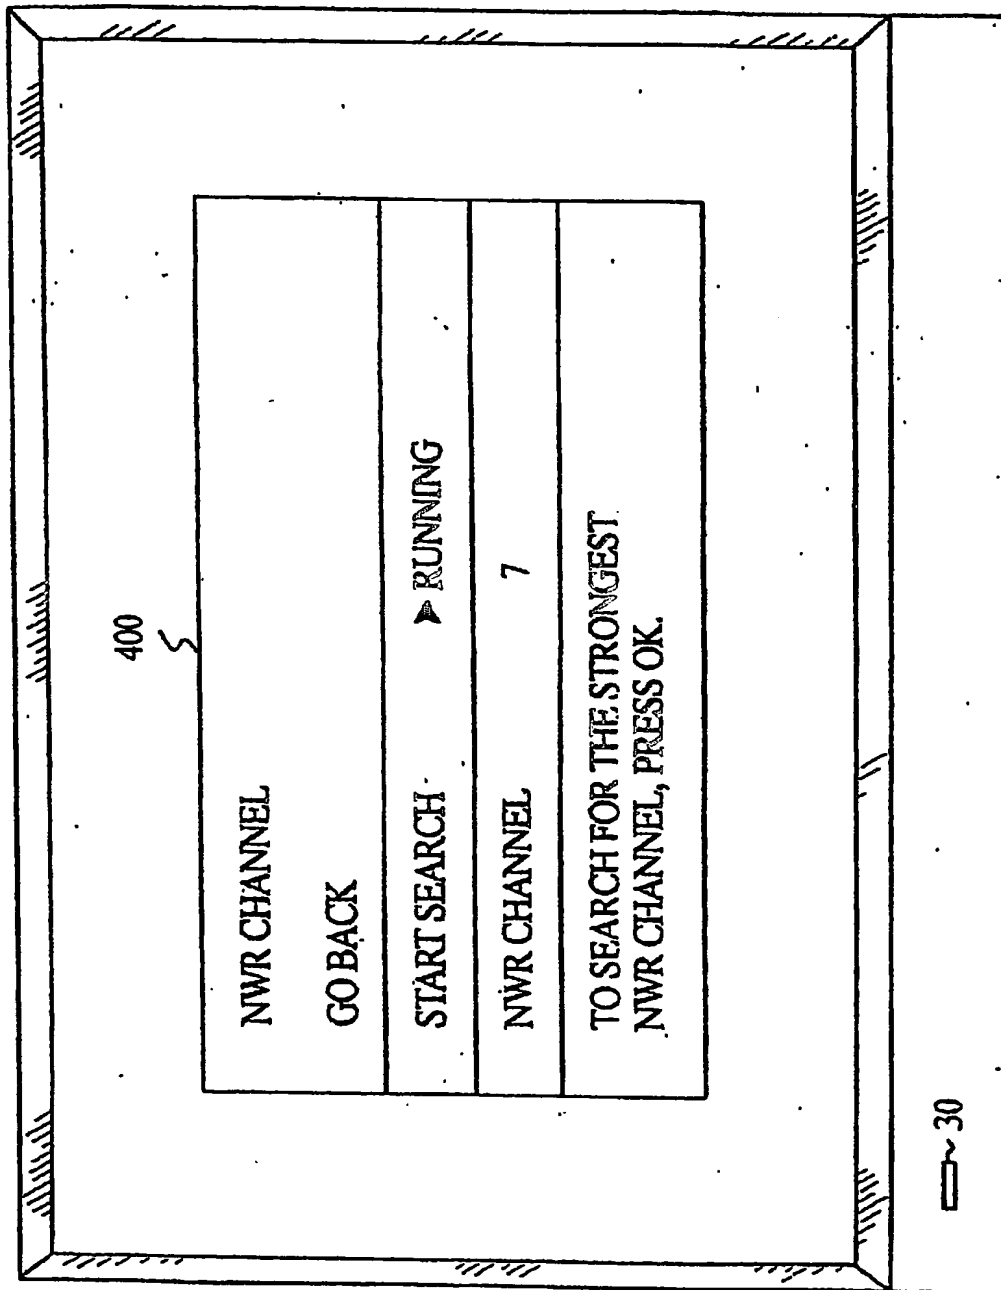 


FIG. 4

5 / 12

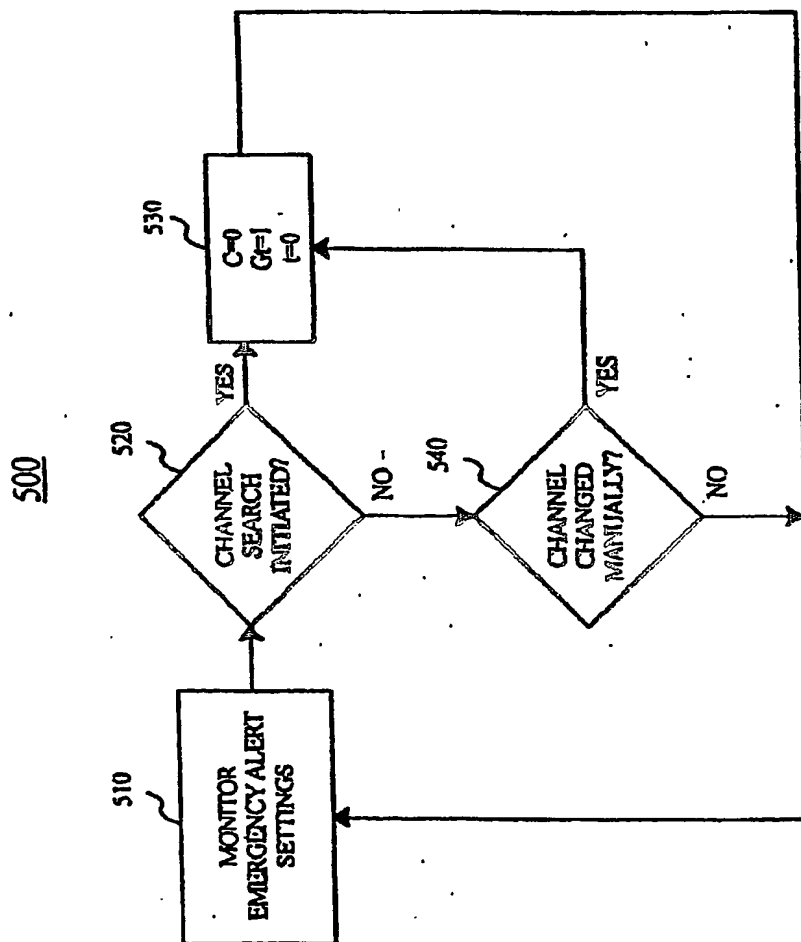 


FIG. 5

6 / 12

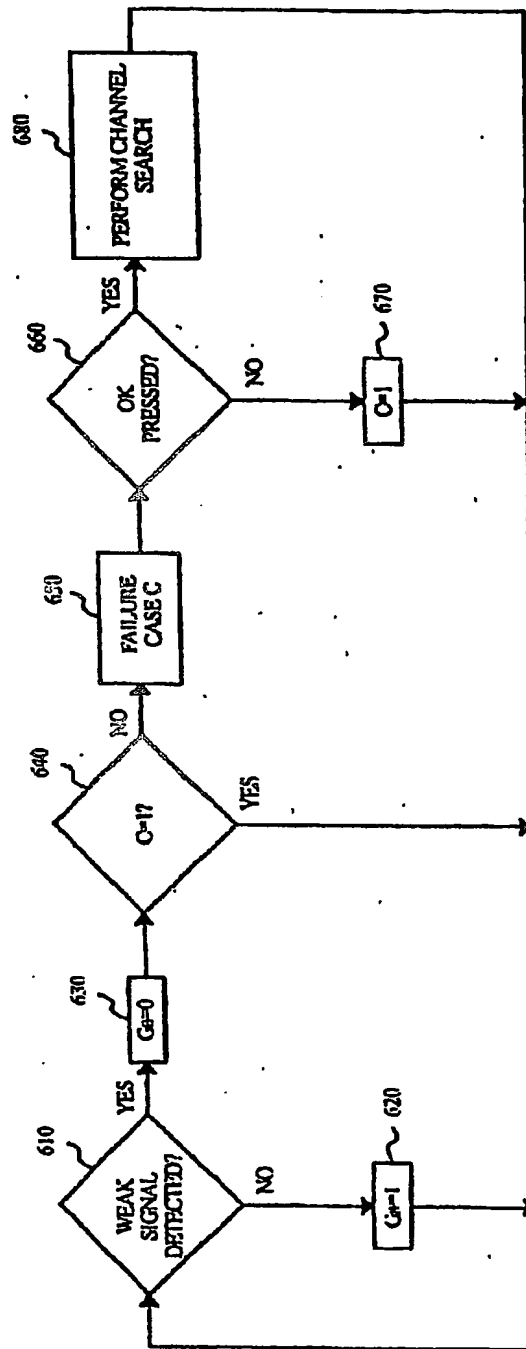 
600

FIG. 6

7 / 12

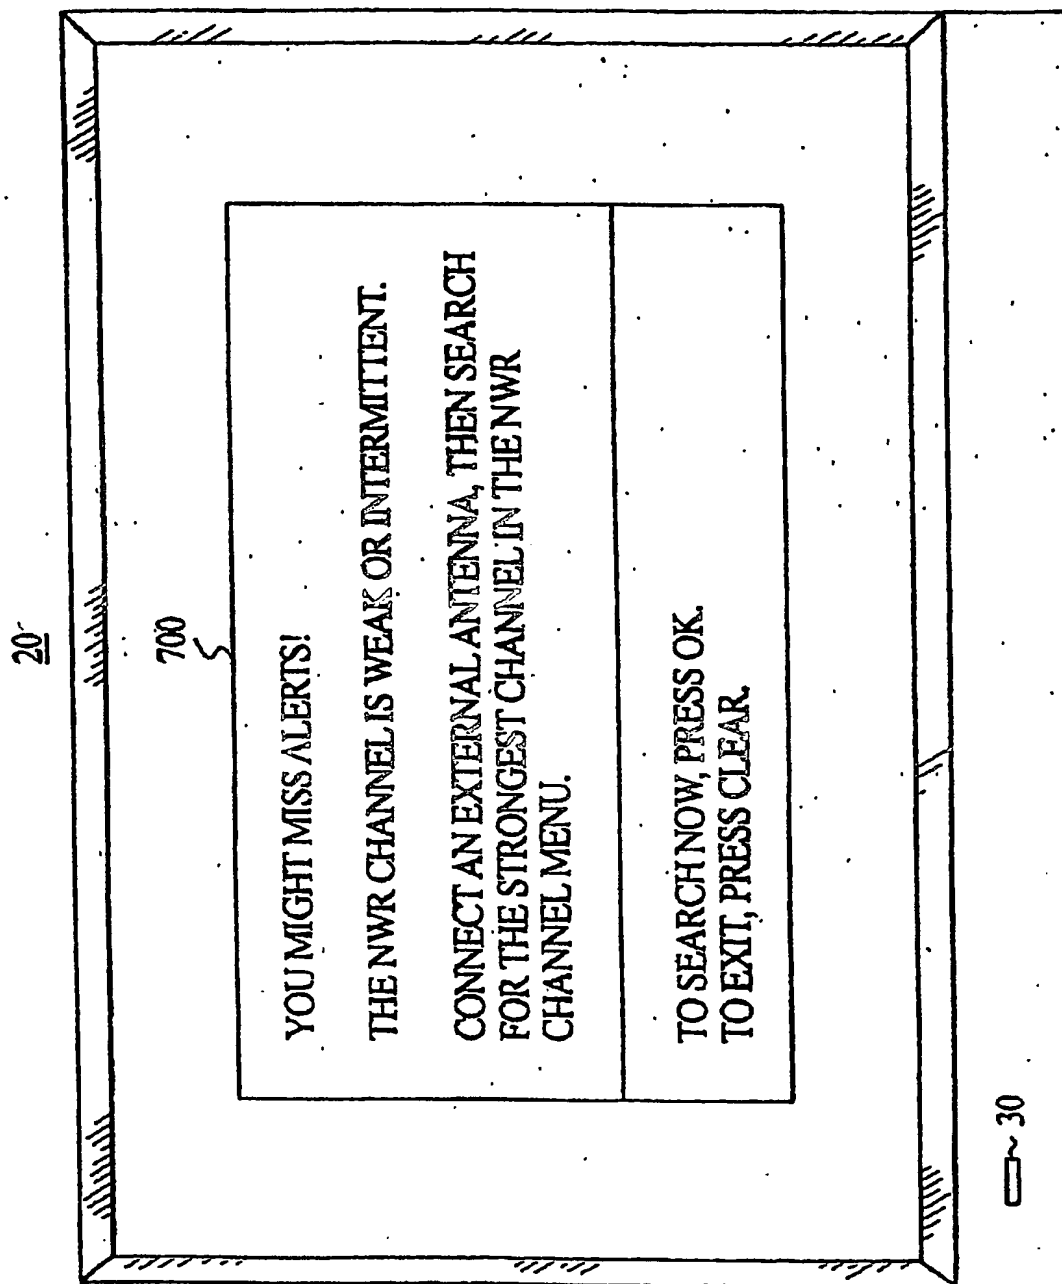 


FIG. 7

8 / 12

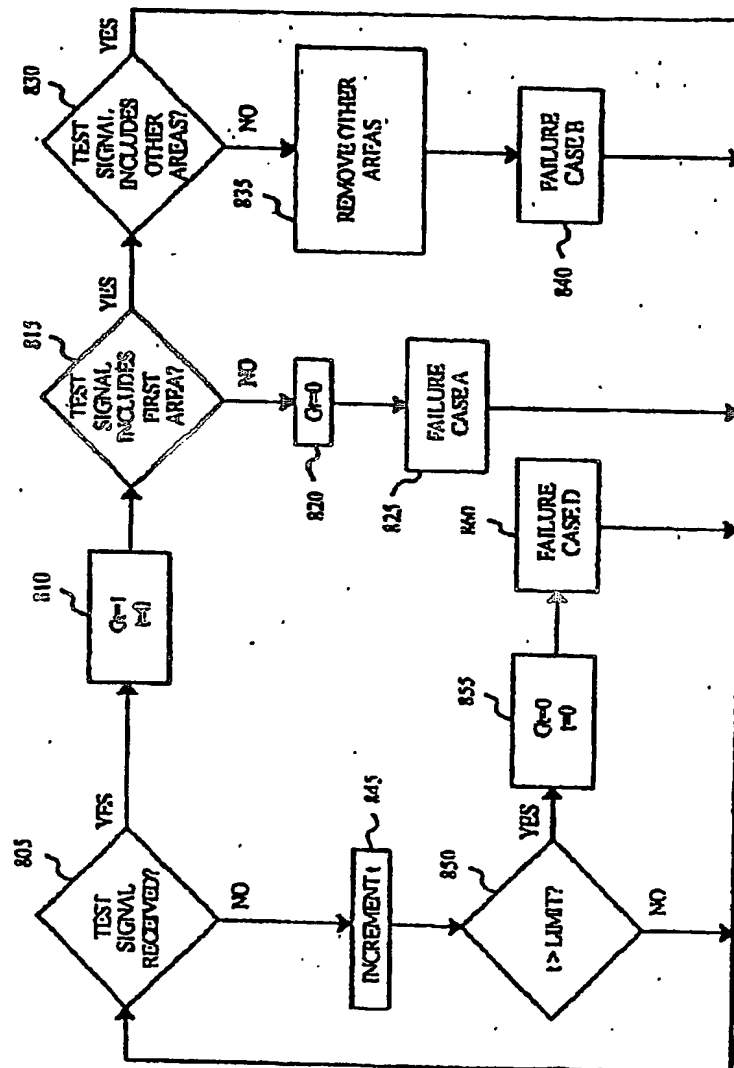 
800

FIG. 8

9 / 12

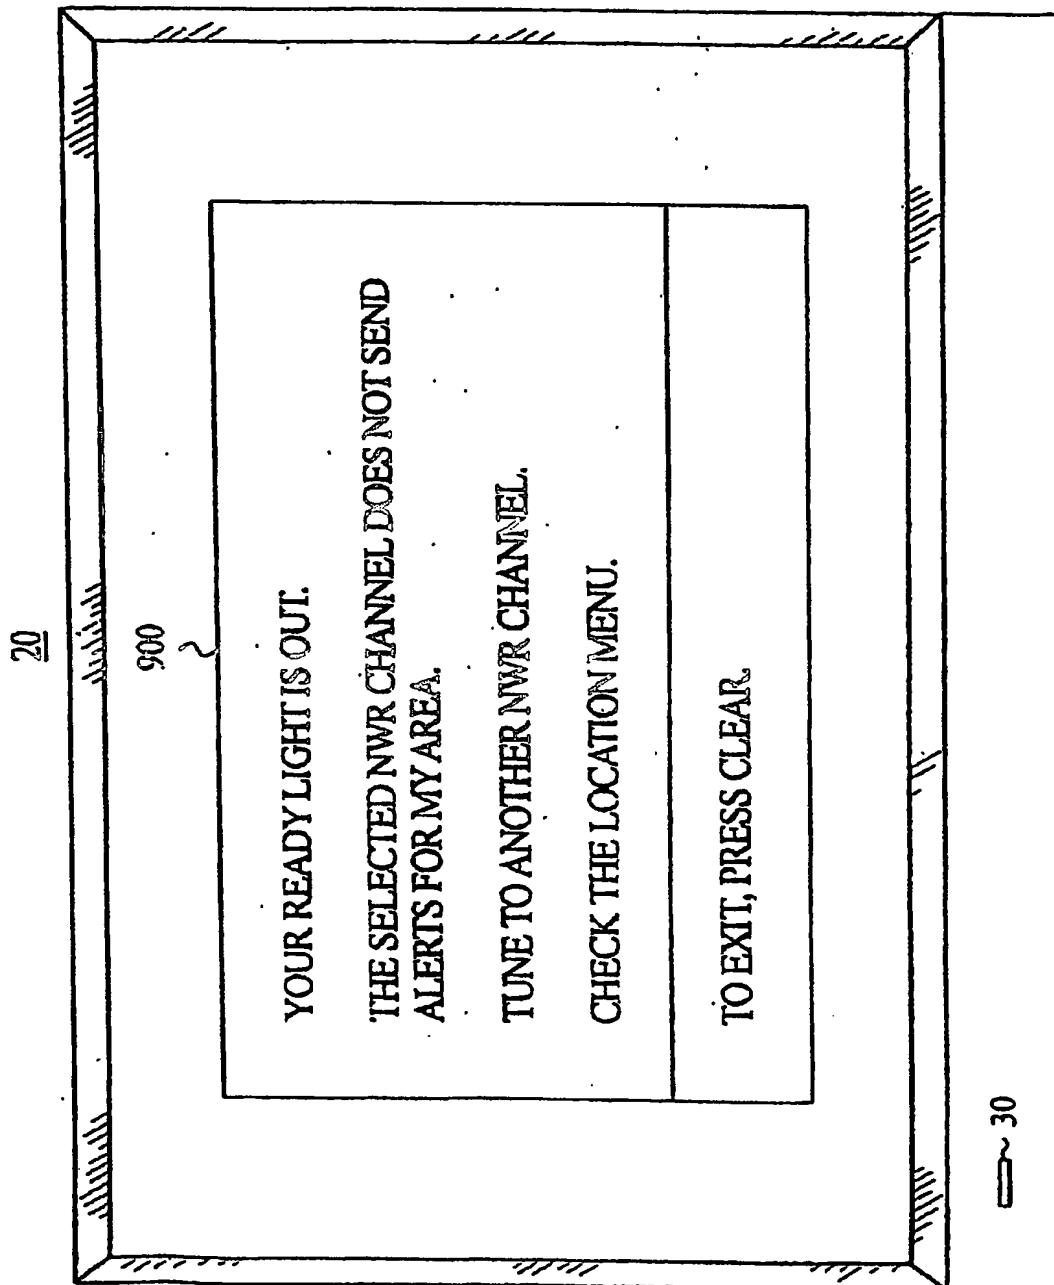 


FIG. 9

10 / 12

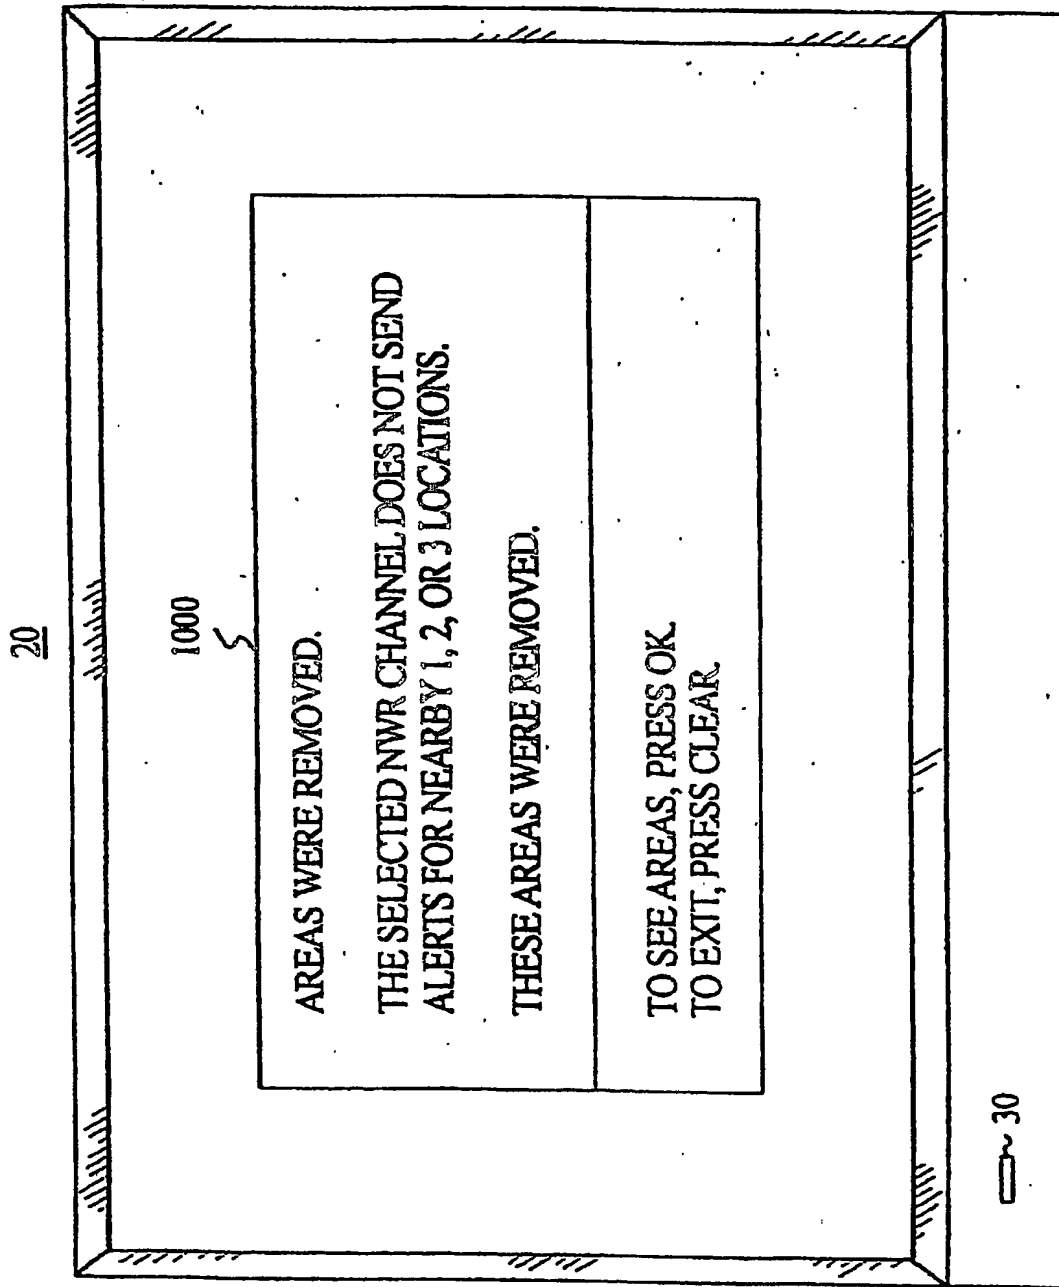 


FIG. 10

11 / 12

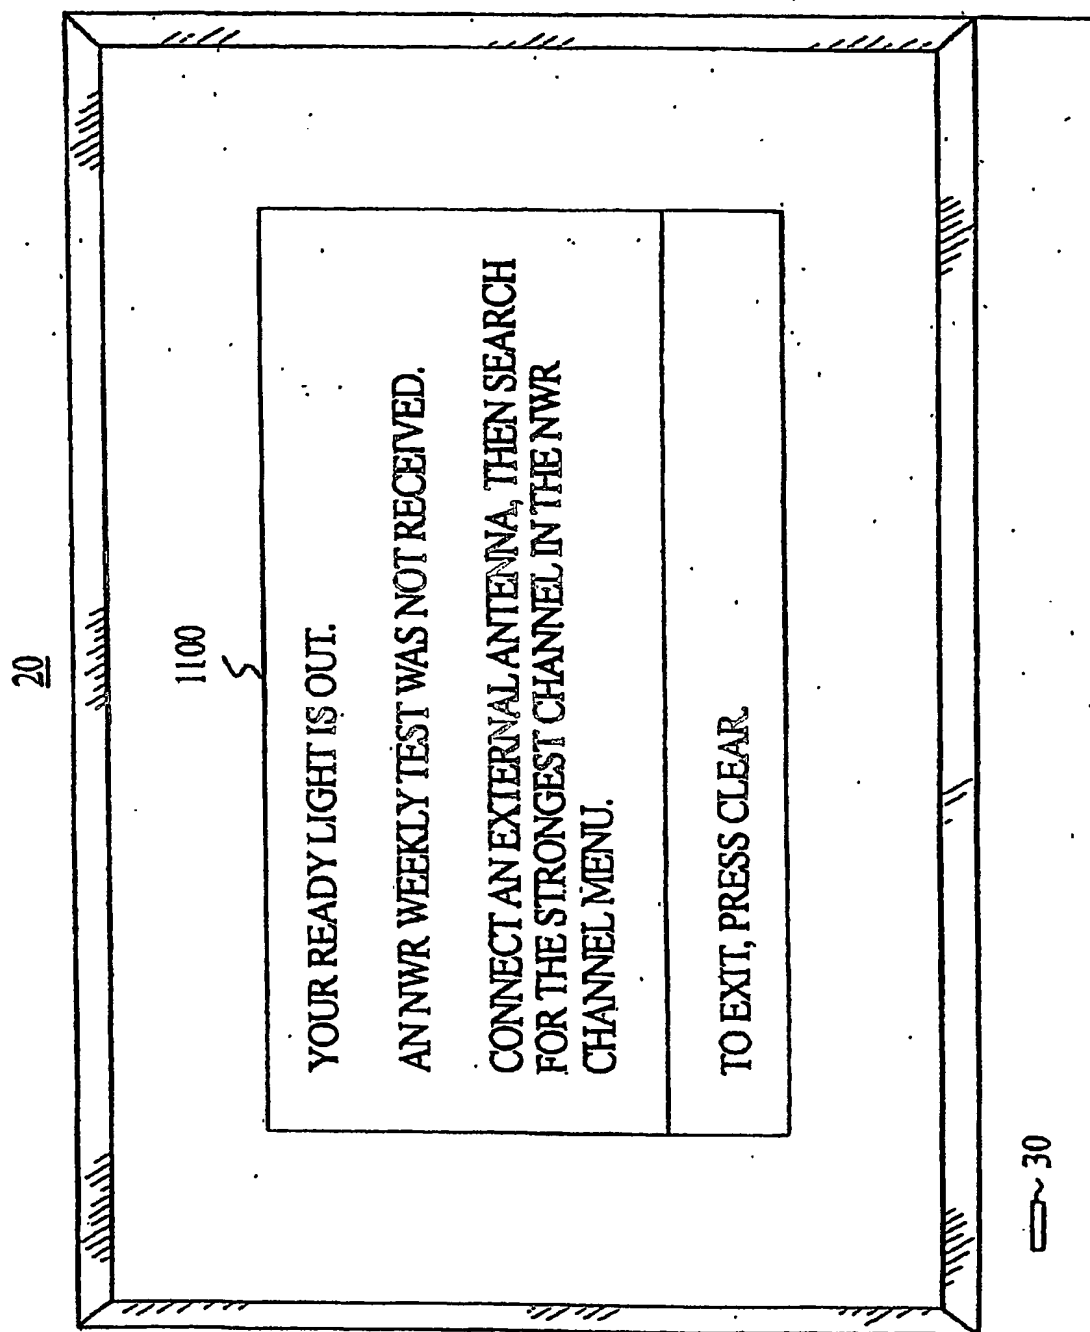 


FIG. 11

12 / 12

20

1200

POWER WAS INTERRUPTED.

ALERTS MAY HAVE BEEN ISSUED DURING THE
POWER OUTAGE.

PRESS THE HEAR VOICE KEY FOR MISSED ALERTS.

IF YOU MOVED THE TV, UPDATE AREAS IN THE
LOCATION MENU.

TO SEE AREAS, PRESS OK.
TO EXIT, PRESS CLEAR.

□ ~ 30

FIG. 12